Hill 90MD

Exam Chair



Hill Laboratories

REFERENCE MANUAL

Congratulations!

And welcome to the Hill Laboratories family.

Hill Laboratories Company has been making

quality a family business since 1945.

Your Hill 90MD is built in a tradition of

innovation and value that Hill Laboratories products

have become known for.

Our good name rests on the confidence that

your Hill Chair will provide you with solid, reliable service

for many years to come.



The Hill Laboratories Guarantee

Your Hill Laboratories 90MD has been thoroughly tested and inspected before shipment. All parts are guaranteed against defect in materials for one full year from date of purchase. During this period, any such defect will be remedied by Hill Laboratories or by a factory-authorized repair service without charge.

Tables damaged by mishandling or accident will be repaired at a reasonable charge.

All correspondence should be directed to your local dealer, or when this is not possible, to Hill Laboratories directly.

We appreciate your business and your confidence in our product. Our aim is to provide you with excellent service and satisfaction for many years to come.

Howard A. The

President of Hill Laboratories Company

Table Serial Number_____

Ready for use.

Your Hill 90MD comes ready to plug into any 115 volt outlet.



Specifications

Table Rating

Lifts up to 400 lbs. Static Tested at 1000 lbs.*

Height Range - 22"-35"

Standard Width - 26", optional 26"

Length Reclined - 71", Extends to 79"

Table Base Skirting

Acrylic thermo-plastic

Foam

Ultra-Cell® for comfort and shape retention

Shipping Weight

Approximately 250 lbs

Electric Requirements

115 v \sim , 60 Hz., 10 A (2 motor), where specified - 230 v \sim , 50 Hz.

Receptacles in base - 115 v~, 250 Watt maximum

Note: Grounding reliability can only be achieved when the equipment is connected to an equivalent receptacle marked hospital only or hospital grade. There is no EMI concern related to the safe operation of this table.

Transportation and Storage Conditions Ambient Temperature Range:

 -30° C to $+60^{\circ}$ C (-22° F to 140° F)

Relative Humidity

0% to 90% (non-condensing)

^{*}We have tested this model at 600 pounds. The UL standard requires static load testing at four times the rating stated on the label. The static load test was 1000 lbs. making the label rating 250 lbs.

Table Care

Cleaning Your Table

Your Hill Table comes upholstered in a highly durable vinyl material. Its appearance is guarded by Prefixx** brand protective finish. Your upholstery may be cleaned with the Hill Laboratories Vinyl Cleaner or any non-abrasive household detergent without change to surface luster. Stubborn stains can be cleaned with most common solvent cleaners such as naphtha (lighter fluid), rubbing alcohol (IPA type), toluene, Coleman gas, turpentine (paint thinner), and nail polish remover (50/50 mixture of acetone and water) with no change to surface luster or color. One hundred percent acetone can also be used for short periods but it is suggested that it first be tested on an inconspicuous area of the table.

Caution: These solvents are highly flammable; exercise proper care when cleaning with these materials and do not use near open flame or intense heat. Wear rubber gloves during all cleaning activities. When cleaning other parts of your table (besides upholstery) use only nonabrasive household detergents and water.

Cautions and Symbol Explanation

Caution: Be sure to unplug your table before performing any maintenance on the table.

Caution: The table should be checked once a year to make sure all internal and external bolts are secure.

Caution: The table should be in its lowest height position when not attended.

Caution: In case of power outage, the table will rely on the generator back-up of the facility where the table is installed for powering the table to its lowest position.

Caution: The power cord shall be located to avoid objects being rolled over or placed on top of it and also to avoid people tripping over it. Damaged cords should be replaced with another of hospital grade.

Caution: Grounding reliability can only be achieved when the equipment is connected to an equivalent receptacle marked hospital only or hospital grade.

Special Caution:

To avoid injury or damage to the chair, NEVER SIT OR LEAN ON THE FOOT SECTION WHEN IT IS RAISED TO THE HORIZONTAL POSITION. The foot section is designed to support a seated patient's feet and lower legs only. To prevent any problem from occuring, adjust the foot section down before a patient exits the chair.

Symbols: - Each of the symbols below are used on your Hill model labeling. An explanation of each is below.





Attention Symbol consult accompanying documents



Dangerous Voltage Symbol



Type BF Applied Part Symbol




Ground Symbol



Alternating Current Symbol


Adjustable Headpiece


The adjusting headpiece can be moved in both the forward-backward direction and up-down. To adjust the forward position of the headpiece, loosen the black knob directly behind the head cushion ("A" in photo) and adjust the cushion position. Then, retighten the knob. Repeat the same procedure for the up and down adjustment ("B" in photo). Rated at 20 pounds and tested with 160 pounds.

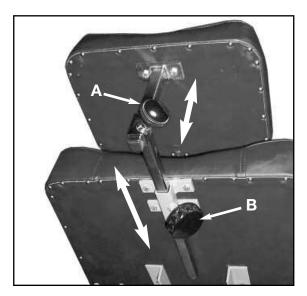

Fold-Down Armrests


When the fold-down armrests are positioned in the normal position (as shown in Photo A), they can be easily folded back by simply lifting from the bottom until the armrests are parallel with the back seat cushion as shown in Photo B. Rated at 10 pounds and tested with 80 pounds.

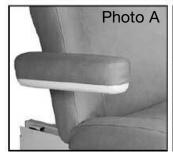

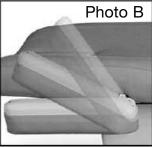

Adjustable-Angle Seat


The Adjustable-Angle Seat has two positions and should only be adjusted before a patient mounts the chair. To adjust the angle, simply lift the front of the seat by hand—this will engage the support bars beneath the cushion (see photo). **Never attempt to adjust the angle while the patient is seated.** Once patient has exited the table, lift the front of the cushion and turn the knob (A, photo 4) clockwise to return support bars to flat position.

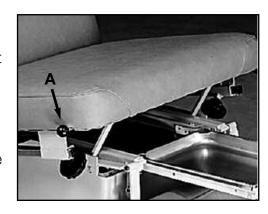

Slide-Out Removable Tray

A stainless steel slide-out tray is positioned by simply pulling the tray frame forward to the desired position. The tray itself is fully removable for easy cleaning.



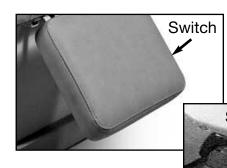


Fold-Down Foot Section

The angle of the Fold-Down Foot Section is controlled by a manual switch located under the right side as you face the end of the chair. Press and hold the switch to freely adust the angle of the cushion. Release to lock the cushion in place.

Stirrups

The 90MD stirrups are located on both sides of the main seat cushion. Their length can be adjusted by loosening the black knob (A, photo A), pulling the stirrup out to the desired position, and then tightening the knob again. When not in use, the black foot section folds down and under the cushion (photo B).

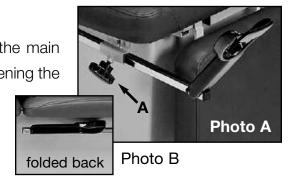



Foot Pedals

Up to four foot pedals may be mounted together on one control. The far left pedal, marked **Back**, controls the angle of the back cushion. The middle-left pedal, labeled **Tilt**, controls the tilt angle of the seat cushion (Caution: The lift back cushion needs to be tilted up a minimum of 15° to tilt the table into the trendelenburg position. To avoid injury or damage, the lift back should not be operated without the flat plastic panel in place on top of the plastic enclosure.) The middle-right pedal, marked **Height**,

controls table elevation. The far right pedal, labeled **Foot**, controls the angle of the foot section from horizontal to 90° perpendicular.

Examination Armboard

The optional Examination
Armboard inserts
from either side of the
chair and tightens with a knob. It can
be positioned and locked at various angles
vertically and horizontally as shown in the photos left and right.
The Armbord is rated at 10 pounds/tested with 80 pounds.


Gooseneck Lamp with Receptacle

To use the optional Gooseneck Lamp, insert the post into the mounted receiver and tighted the knob, turning clockwise. The lamp plugs into the 120 Volt, 5 amp. rated receptacle located at the head-end of the chair, in the center of the table frame. Be careful to position the lamp wire so that it does not interfere with free movement around the chair.







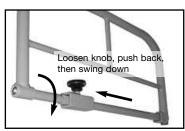

Side Rails


Optional side rails are mounted at each side of the seat cushion and very helpful for increased security while patient is posi-

tioned on the chair. To move the rails to the down position, loosen the black knob (see photo), push rail towards the back of the chair to disengage the square locking tube and then swing the rail to the down position.

Rocker Foot Pedal

The optional Rocker Foot Pedal operates the height of the table from either side of the table base. Press the right side of the pedal for "UP" and the left side for "DOWN". The pedal will return to the nuetral position when released.



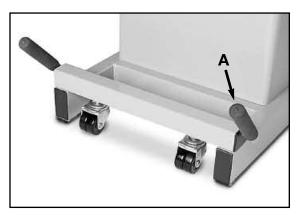


Casters


The optional casters are located at both ends of the table base and facilitate easy table movement. The photo shows the casters in the disengaged position. To move the table you must engage the casters at both ends of the base. To engage, push the handles ("A") down towards the

floor - this will lift the table approximately 1/2" from the floor. Repeat this step with the casters at the opposite end of the base. Move the table as desired. Be sure to disengage both sets of casters before using the table. IMPORTANT: Never move table with caster while anyone is on the table.

Diagrams

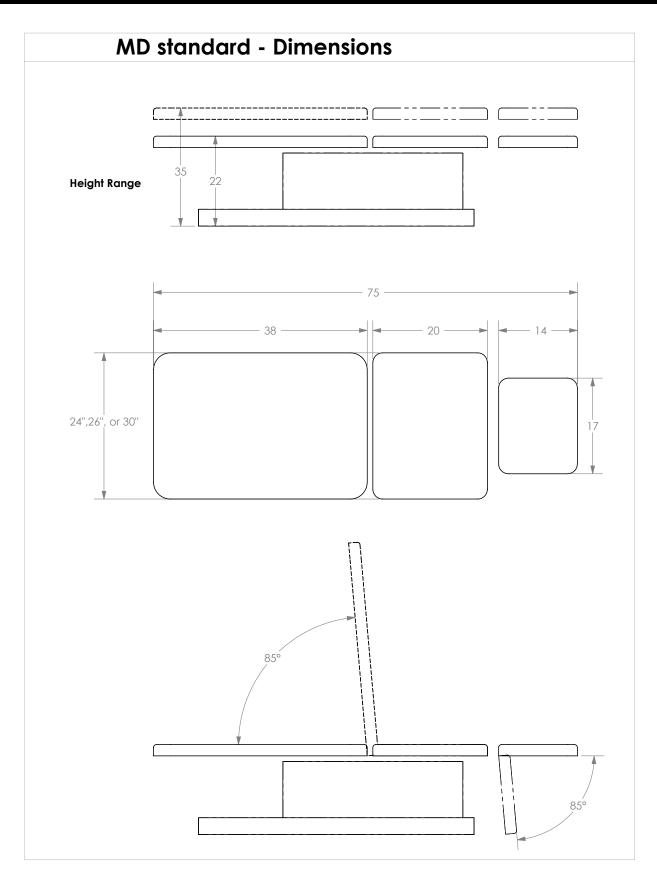


Diagrams

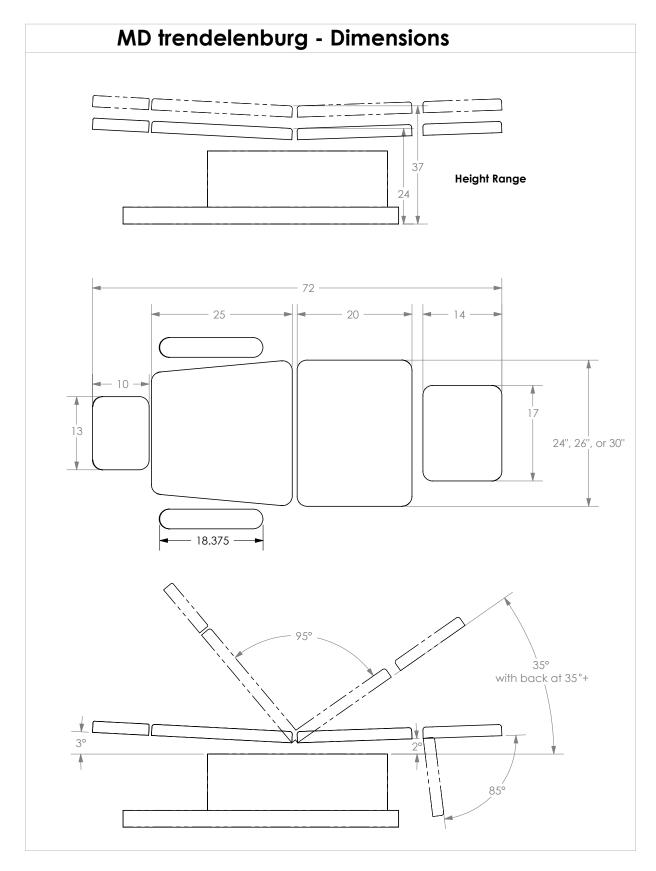


Wiring Diagrams

Two Motor Diagram

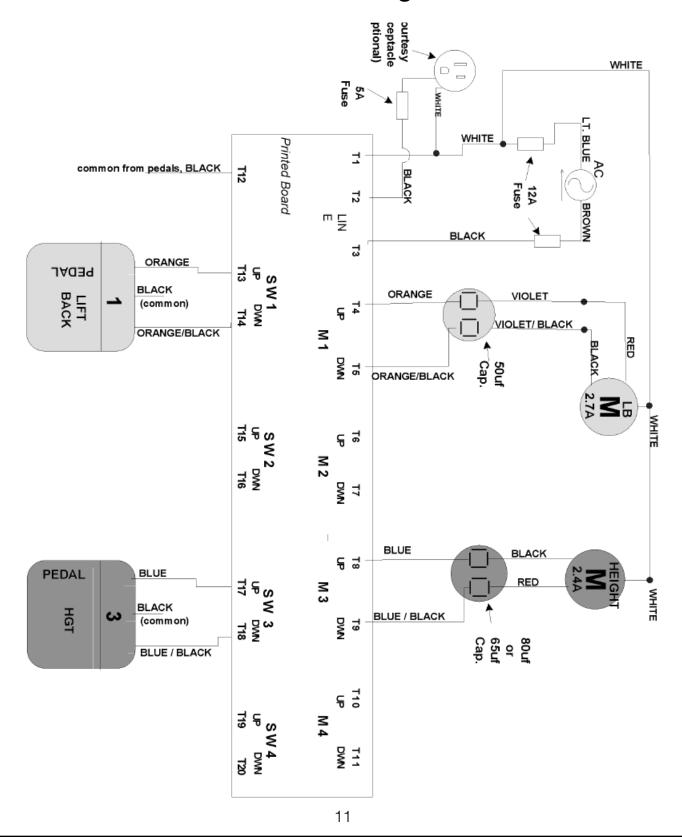

Wiring Diagrams

Three or Four Motor Diagram

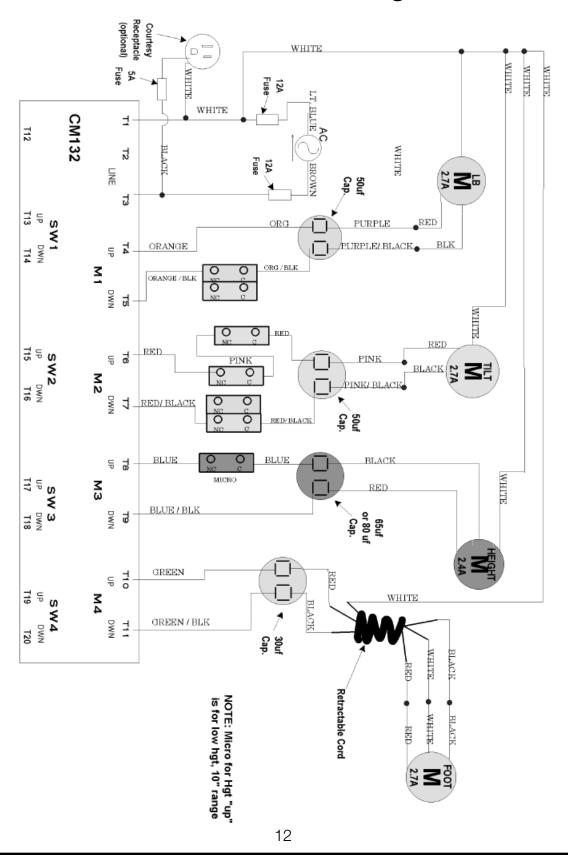

Products Manufactured by Hill Laboratories



Anatomotor Massage w/Traction



90C



Air90C



Air-Flex w/4 Drops



Hi-Lo



HA90



HA90 Lift Back



Mat Table



PT Mobilization



Rath Mechanical McKenzie Technique



Repex Table McKenzie Technique



PT Tilting



HA90E



90MD



90D Dermatology Chair



90W Wound Care Chair



Podiatry Model



Counterstrain (multi-positional)



HA90V Tilt Vascular/Diagnostic



Posture Angel[™] Active Rehab System

